


CARE INSTRUCTIONS

Outdoor Kitchen Units

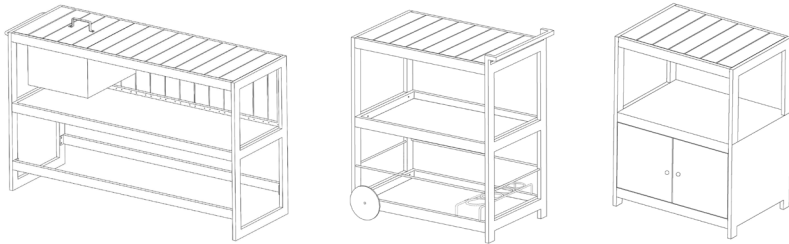

CLEANING:

Clean the item with a damp cloth.

Do not use abrasive cleaning agents or sharp objects to clean the item.

Keep the item dry.

IMPORTANT SAFETY INSTRUCTIONS:

1. The item is intended for outdoor use.
2. The item is not a toy.
3. Only use the item as described in the manual. Do not fix attachments that are not included in the delivery.
4. Packaging materials like plastic bags are not toys for children.
CAUTION: risk of suffocation!
5. Do not use the item as a ladder. Do not stand or jump on the item!
6. Please check all parts regularly. Screws may loosen after some time.